



# Owner's Manual

For your safety and comfort, read carefully and keep in the vehicle.

### Bluetooth<sup>®</sup> Hands Free Phone System







## Index

English
Quick-Start Guide
Operation
Volume Control
Sound Quality4
Dial tones and speaker mute note5
Connection5
Dial6
End a Call6
Reject a Call
Private Call7
Disconnect from Kit7
Memory Erase7
Audio Streaming
Introduction
Compatibility
Playing a music file8
Playback Control9
Receiving Calls9
Important Note9
Pairing Guide10
Pairing Troubleshooting10
Specifications



### **Quick-Start Guide**

#### Car Bluetooth® Hands Free System Device ID **CARBT 1234** Pass Kev 1234 Up Key Answer Kev Down Kev Making and Answering Calls Answer a Call Short press Ending a Call Short press Press for 2 seconds and release Reject a Call when you hear 1 beep Press for 2 seconds and release Redial the last number when you hear 1 beep Voice Dialing Short press In a Call Adjust the volume Up Ā Short press $\nabla$ Adjust the volume Down Short press Press for 4 seconds and release Transfer a Call to handset when you hear 2 beeps Reconnect Call Press for 4 seconds and release when you hear 2 beeps Manual Pairing Press for 8 seconds and release when you hear 3 beeps the Pairing Bluetooth® will enter pairing mode for the next 5 minutes. Press for 15 seconds and release Memory Erase when you hear 4 beeps.



Handsfree Group

### Operation

#### Volume Control

The call volume in the vehicle can be increased or decreased during the call by short presses on the volume up or down key. Once you have reached the end of the scale, you will hear a beep to signal that you have reached the minimum or maximum volume level.

### Sound Quality

The system uses the highest quality components and latest DSP (digital signal processing) to give you the best possible sound quality for the caller and receiver. A few things must be remembered though to give you the best results:

**b. Echo Cancellation** — The system has excellent echo cancellation to prevent the caller hearing themselves back through the kit. To give the best quality for your caller, try and have the volume at the lowest level which you can still easily hear them. This helps reduce any echo effects.

**c. Talk at a normal level** — With some older phone systems you had to yell at the system for people to hear you. This system uses the latest in sensitive microphones to allow you to talk at a normal level. If you yell at the system then your voice will be reduced in volume by the DSP and you may even sound quieter. Just talk at a normal level and your caller will easily be able to hear you.



### Operation

#### Dial tones and speaker mute note

If you dial a number on the keypad of your mobile phone, it could be possible you hear the key tones over the speakers. The speakers will remain muted for a period of 2 seconds after you press a key, if you don't press the next key or "SEND" button within these 2 seconds, the Mute will be deactivated and the sound of your radio will be heard over the speakers. If you experience any inconvenience, we advise you to set keysound to "silent" in your handset menu.

#### Connection

After you enter the car and turn the ignition on, the system will link with your phone automatically. If it is the first time you have connected or your phone was not the last to connect you have to reconnect using your connection menu in your mobile phone.

STEP	1	Bluetooth®	Menu,
------	---	------------	-------

STEP 2 My Devices

STEP 3 Select CARBT\_1234



STEP 5 Connect

IMPORTANT: If you arrive at your destination during a call, it may be necessary to transfer the call back to your handset. Normally the call will be transferred back to your handset automatically when you turn off your vehicle, but it is possible with older mobile phones that the call gets disconnected. To avoid this from happening if you experience this, hold the CARBT Dial button for 4 seconds until you hear 2 beeps. (Transfer a call to handset on page 3)



### Operation

#### Dial

**a. Voice Dial** — A quick press of the phone button activates the voice dial feature on your handset, and when ready the system lets out a "Bleep". Simply say the name of the person you wish to call. These names must be pre-recorded on the phone. Follow the instructions in your phone user manual on how to record the names. To cancel a voice dial press the button once more. If the phone has no voice dials or does not support voice dial you will hear 4 negative beeps.

**b. Dial a number** — Enter the number you want to dial on the phone and press the dial button.

**c. Redial** — To redial a last called number, press and hold the button until you hear one beep after 2 seconds.

### End a Call

Press the dial button.

### **Reject a Call**

Hold the button down until you hear a beep after 2 seconds to reject an incoming call.



### Operation

#### **Private Call**

If you want to have a private call on your handset, after you answer the call, simply press and hold the button until you hear 2 beeps after 4 seconds and the system will transfer the call to the handset. Press and hold the button again until you hear 2 beeps after 4 seconds to get the call back on the hands free system.

#### **Disconnect from Kit**

If you enter the car and you do not want any phone calls in hands free mode, just press and hold the button until you hear 2 beeps after 4 seconds and the kit will disconnect. When calls come in they will only be on your handset. To manually connect again, press and hold the button again until you hear 2 beeps after 4 seconds or restart the vehicle.

#### **Memory Erase**

If you want to clear all paired phones from the kit, just press and hold the button until you hear 4 beeps after 15 seconds, and the memory will be erased.

### Caution

Cellular phone use limits vary by state, province or locality. Obey all laws while driving.



## **Audio Streaming**

#### Introduction

You can use your vehicles *Bluetooth*<sup>®</sup> Hands Free system to also listen to music that is stored on your Mobile Phone / PDA / Smart Phone. The music will come through in stereo, with full clarity, on the front two speakers of the vehicle.

#### Compatibility

You can use this feature on any Mobile Phone / PDA / Smart Phone that supports the *Bluetooth®* A2DP profile (Advanced Audio Distribution Profile)

Playing a music file			
STEP 1	Ensure your phone is paired to the Bluetooth® system and the		
	Connection is active. Refer to the Connection instructions in the		
	Operation section for more information.		
STEP 2	Open the Media Player on your Phone and start playing a file.		
STEP 3	You should now hear the music playing on the front two speakers of		
	the vehicle.		
STEP 4	If you do not hear music on the speakers, please refer to your Phone's		
	user manual for further information, or verify that the phone does		
	support A2DP.		
Redial			
	audio streaming mode you can redial by pressing the answer key releasing when you hear one beep.		



1

## **Audio Streaming**

### **Playback Control**

You can control the music playback either from the phone, or using the  $\textit{Bluetooth}^{\$}$  button

in the car. Refer to the following guide:



Playback Control		
Play	ſ	Short Press on the Answer Key
Pause	ſ	Short Press on the Answer Key
Next Track	Ā	Double Press on the Up Key
Previous Track	$\nabla$	Double Press on the Down Key
Volume Adjustment		
Volume Up	Ā	Press and Hold on the Up Key
Volume Down	$\nabla$	Press and Hold on the Down key

Note: All other phone functions as described on page 3 will work with the exception of voice dial.

#### **Receiving Calls**

If you receive a call while using *Bluetooth*<sup>®</sup> Audio Streaming, the phone call will take priority over the music. When you finish the phone call, the phone should revert to playing music. If not, press the answer key or phone play button to resume audio.

#### Important Note

When using *Bluetooth*<sup>®</sup> Audio Streaming, the vehicle Radio is in a "Muted" state as the phone system takes control. To return back to the AM/FM Radio, CD or Cassette, you must stop the music playback from your Phone / PDA / Smart Phone.



## **Pairing Guide**

#### Pairing your phone is simple, just follow these steps : (The system can pair up to 3 phones)

- Hold button down until you hear 3 short beeps, after 8 seconds. (This puts the system into pairing mode for 5 minutes)
- 2. Go to settings or connections in your phone menu.
- 3. Find the *Bluetooth®* menu.
- 4. Turn Bluetooth® on.

Your phone will have a function like:

Search for new device --> New ->> Handsfree Search

Depending on the phone, the selection will vary, select the function and the phone will search for the  $Bluetooth^{\odot}$  kit.

Your Phone will then display all the *Bluetooth®* devices in the area. Select **CARBT** Enter the passcode **1234**. The system will let out a positive bleep to advise you are now paired.

IMPORTANT NOKIA USERS: If you want the kit to connect automatically you must now select Paired Devices and select the CARBT and change default to: Device Authorised — Yes, or Conn Auth — Yes or Auto-Conn. Without Confirmation — Yes

This allows your phone to automatically connect when you start the car.

#### **Pairing Troubleshooting**

Cannot find the <i>Bluetooth</i> <sup>®</sup> menu	Please see the user manual of your phone for assistance on various phone models.
Phone will not pair	Sometimes phones have software problems and need to be reset. Please remove and reinstall your battery and try again. Try deleting all other devices from your phone and try again, as you may have exceeded the maximum number of connections for your handset.
I paired my phone but when I start the car it does not connect automatically	See the Pairing Note above for Nokia users.



## **Specifications**

#### **Product Specifications**

Power supply voltage scope	DC 9 ~ 25 volts
Working temperature	-35°C ~ 85°C
Storage temperature	-45°C ~ 105°C
Current consumption	In Operation: • ACC ON (during charging + conservation) 300mA ~ 1.5A(Max) / DC 12V In Static Mode: • ACC ON (during charging) 100mA(Max) / DC 12V • ACC ON (mobile is not connected) 100mA(Max) / DC 12V • ACC OFF ~ 0mA
Microphone (including amplifying circuit)	Category: Directional Sensitivity: 50dB ± 4dB tolerance SN ratio: >55dB (Min) Frequency response: 100 ~ 16 KHz
Amplifier output (drive loudspeaker)	Output power: 2 x 6W RMS Impedance: 4 Ohm Max output current: 2.6A Max undistorted amplitude: 8Vpp
Mute Mode	Negative Trigger
Bluetooth <sup>®</sup> DSP	Full Duplex, Noise Reduction, Echo Cancellation
<i>Bluetooth</i> <sup>®</sup> module	Conforms to <i>Bluetooth®</i> Headset Profile v1.1, v2.0, v2.1 + EDR
Transmission specification of each terminal	Terminal connecting to the vehicle bodyline > Batt: • Supply Voltage : 9 ~ 25V • Supply Current : 1.5A (Max)

### **₿ (€ F©**







# Owner's Manual

For your safety and comfort, read carefully and keep in the vehicle.

## Bluetooth<sup>®</sup> Hands Free Phone System

### 🚯 Bluetooth<sup>®</sup>

